
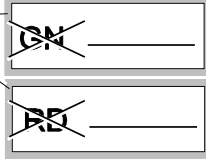
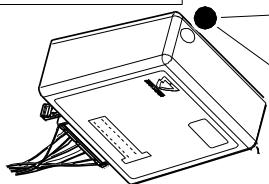


Status LED for self-diagnosis

Operation Support

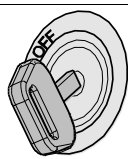

No CAN-Data

 
 
 

=




Standby / Sleepmode



Ignition OFF

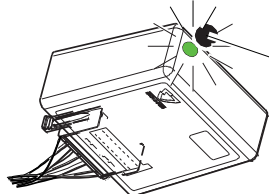

Ignition ON

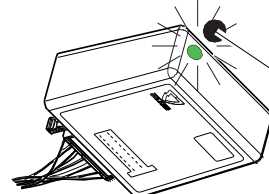





Ignition ON

Failure Support

CAN-Data Wire




 1x max. 5 min.

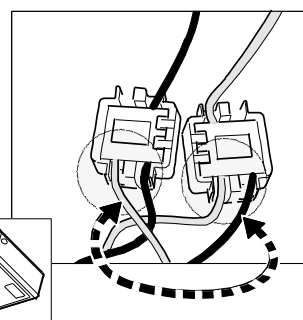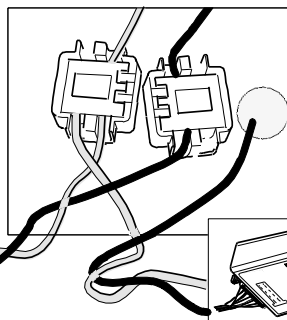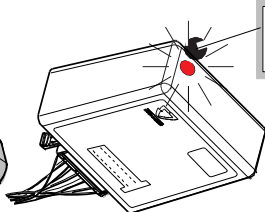

Ignition ON

 Failure indicated by the module LED glowing red for a maximum of 5 minutes. If trailer connected the tail lights will also glow indicating failure of CAN signal.



Ignition ON

